MODEL NUMBER: SEE B.O.M. ON LAYOUT	FIXTURE TYPE: DATE: 11/8/2016	SCALE: FILE NUMBER: Product		LS\ALS-H05-H06_Install	RAWN BY: CHEC	CKED BY:	IO. REVISIONS DESCRIPTION	BY DATE
PROJECT NAME: H05 / H06 INSTALLS	weight: N/A		FIXTU IN	JRE DESCRIPTION: ISTALLATION INSTRUCTION	IS FOR ALS-H05-H	06 SLOT SYSTEM		
INSTALLATION INSTRUCTIONS 1. DO NOT REMOVE WOOD BRACING UNTIL HOUSING IS COMPLI	ETELY EDAMED IN For ALS installation. Complete the	PRO	VIDED JOINER HARDWARE				METRIC DETAIL	
housing configuration per the layout (see b.o.m. to determine structure) housing extrusion alignment bars to centerline of extrusion metal enclosure segments together through side and to NOTE: THIS STEP IS CRITICAL FOR PROPER JOINT ALIGNMENT. SPROVIDED HARDWARE. Check all mechanical connections for the structure of the structur	ermine each housing location). Join sections together lon joint and tightening #8-32 set screws. Connect she p flanges using provided #10 hardware and tighten. SLIDE IN ADJUSTABLE HOUSING TO FILL IN GAPS, FASTEN WITH					(GENERIC (PROPER BLOCKING R TO MAINTAIN VISUAL ((BY	EQUIRED
2. Support fixture to ceiling structure by using provided 2'-0" and within 12" from each end). Frame around fi blocking may be removed at this time). Measure visual framing to sustain consistent opening width.	xture to maintain proper fixture visual opening (wood opening over length of fixture every 12" and adjust					ALS	-H05 CORNER UNIT	
 For bt track installation, complete the configuration "cut to fit" joiner on either side of a corner, or the and cut before preceding to the next step. 								
4. Assemble configuration by sliding track sections onto polarity lines (same for feed and end cap). Then place (3 clips per 8' peice of track and 2 clips per 4'). Fee chamber.	track configuration into slot and "snap" clips into pla	MUST BE SLID OUT I	BAR (FACTORY INSTALLED) HALF WAY AND TIGHTENED ALIGNED EXTRUSION JOINT		*	•	000000000000000000000000000000000000000	6
5. Make electrical connections to bt feed (this is provide	ded with 18" whips). connect power and test.	ALS ADJUSTABLE H	HOUSING —			0300		
6. The drywall ceiling may be completed at this time. t using self drilling truss screws provided by others (see						0.0.00000000000000000000000000000000000		
7. To attach fitter to the track, align the polarity lines top portion of the adapter (with contact fingers) into the DO NOT FORCE, but turn in opposite direction, to remove turn 90°.	he slot and turn 90°. if the adapter does not turn ea	ily,			0.0000			
	5			000000	SELF DRILLING DRYWAL SCREW (BY OTHERS			
FEED WIRES FEED HOLE	GROUND CONNECT TO INCOMING POWER		0.00	HANGER B	RACKET		BT END CAP	
WIRE CHAMBER	SPRING CLIP		WIRE	CHAMBER 4		4		
BT TRACK SYSTEM	4			4	(4)	THIS	<u>FALLATION INFORMATION:</u> S FIXTURE IS TO BE INSTAI	
			4	BT JO	SPRING CI	LIST RET USE	JLATED CEILINGS ONLY. THI ED FOR USE AS AN AIR V URN—AIR PLENUM CEILING. IN AN UNVENTED APPLICA IMUM AMBIENT TEMPERATUI	'ENT IN A DO NOT ATION.
	SKIM COAT OF DURABOND/ OR SIMILAR MATERIAL		5 BT FEE	BT TRACK				##@lah