

C2O[bject] OPTIC INSTALL INSTRUCTIONS

REV-0: 01/10/2022

251 Elm Street
Buffalo, New York 14203

T: 716.856.4300
F: 716.856.0156

www.litelab.com

Instructions for Optic Removal:

1. Gently Push Accessory Cartridge forward towards the optic, the optic contains a toothed ring which will interact with the top of the accessory cartridge which is also keyed.
2. Once you feel the teeth engaged, rotate counter-clockwise till you feel the optic release from the lock. It will feel loose, and the optic will begin to jiggle in the fixture housing.
3. Pull accessory cartridge out and optic will freely release and drop out of the cylinder

Instructions for Optic Insertion:

1. Remove accessory cartridge. Load optic on top of accessory cartridge so the teeth are engaged.
2. Gently Insert Accessory Cartridge forward towards the LED, once you feel the optic seat into the locking ring, rotate accessory cartridge **clockwise**. **Do not over rotate or use excessive force, you may cause damage to the optic. It should only be about a 1/4 rotation.**
3. Once you feel the optic lock in, gently jiggle the fixture to ensure that you have properly seated the optic, there will be no movement if done correctly.
4. Pull accessory cartridge back to the flush position in the front of the fixture

