


Using a philips screwdriver turn adjusting screw clockwise in each ceiling clip until fixture is snug to finished ceiling surface. (do not over tighten)

flange and into ceiling blocking, complete

ceiling as required. (This step is optional.) Set self drilling drywall screws through mud

CEILING CLIP (EACH SIDE)

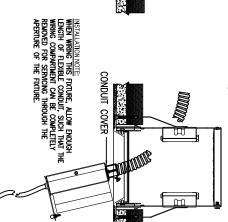

SELF DRILLING DRYWALL SCREW

ADJUSTMENT SCREW

CLOCKWISE

PHILIPS SCREWDRIVER

See note below for proper length of conduit. Failure to do so will make future maintenance of ballast or wiring difficult.


Wire power supplies as required using approved wiring methods and hardware

into enclosure, replace thumb screw and secure unit in place. Remove conduit cover then wire power supply/wiring chamber assembly back

Insert gimbal assembly in box repeating steps above. Replace thumb screw.

Note:

Gimbal assembly can be mounted in two positions (high and low) by flipping it over.

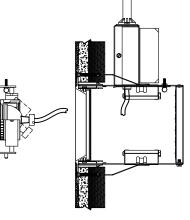

OPTIONAL BUTTERFLY BRACKETS
HIPPED SEPARATELY SEE SEPARATE
HEET FOR MOUNTING INSTRUCTIONS

NO STALLATION INFORMATION:

NOT INSTALL INSULATION WITHIN 3" (76mm)

OF ANY PART OF THIS FIXTURE. DO NOT BLOCK
VENT HOLES ON FIXTURE. MAXIMUM AMBIENT
TEMPERATURE NOT TO EXCEED 35°C.