


MODEL NUMBER:	FIXTURE TYPE/SCALE:		FILE NUMBER:	DATE:	NO.	REVISIONS DESCRIPTION	BY	DATE
PROJECT NAME:	1/4/01	N/A	Prod/SlotFix/Bline/B-Line-Install	D.G.A.				
	APPROX. WEIGHT:	N/A	DRAWN BY:	CK'D BY:	FIXTURE DESCRIPTION: BUTTERFLY INSTALLATION			

# INSTALLATION OF BUTTERFLY BRACKET ON TRIMMED FIXTURES (Optional mounting method)

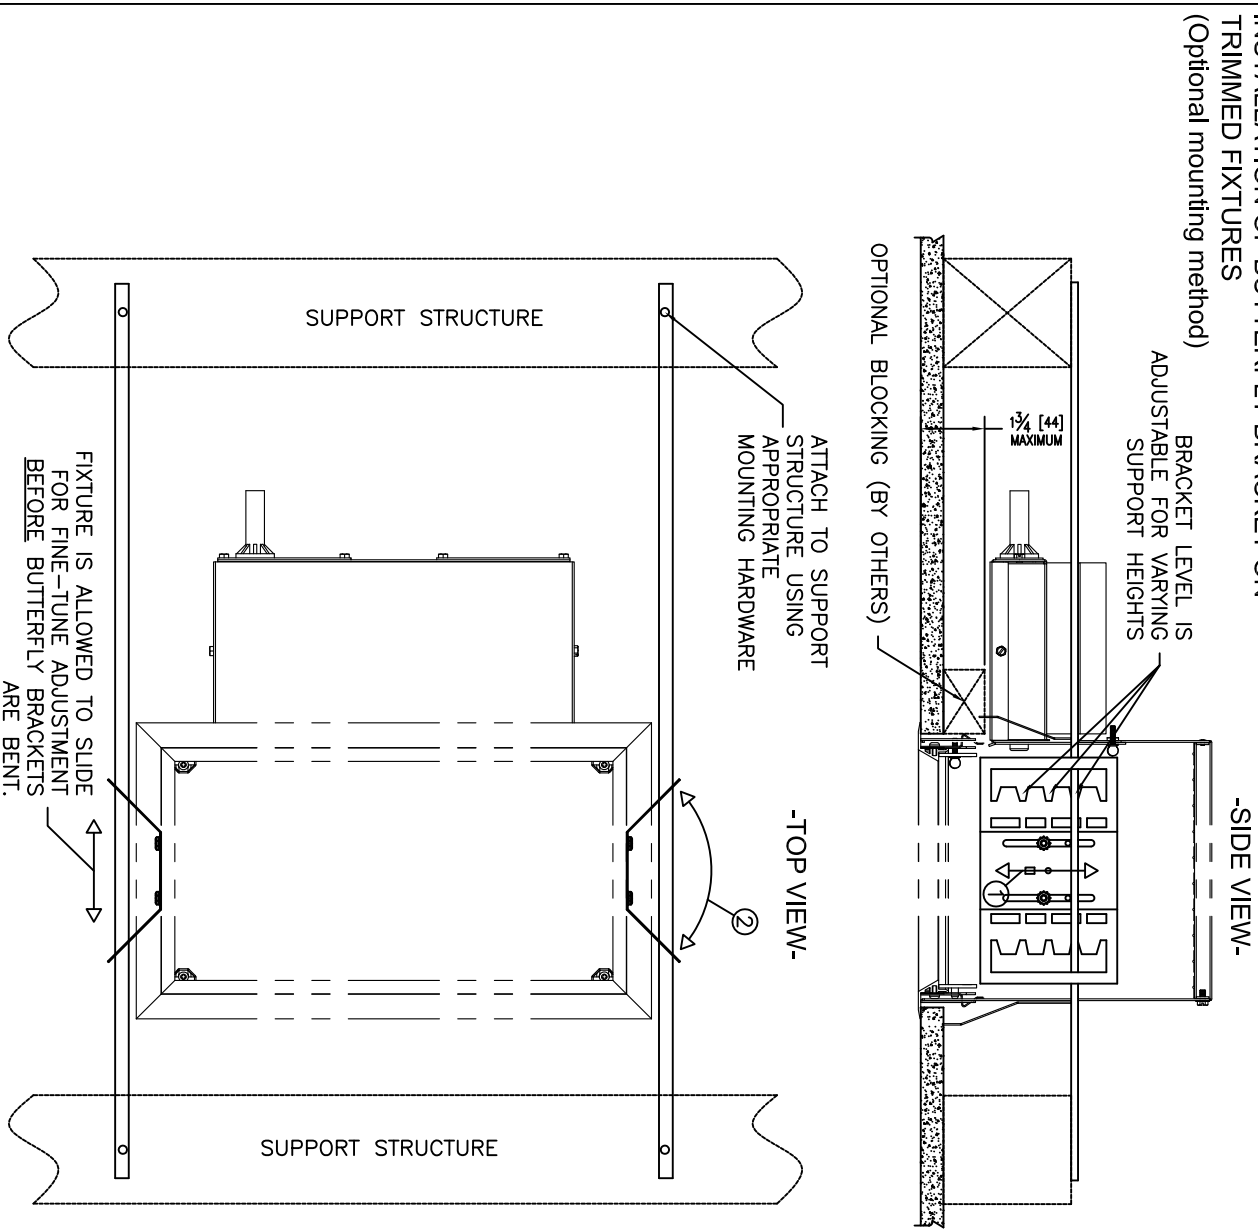

## INSTALLATION NOTES:

- 1). WHEN USING BUTTERFLY BRACKETS, INSERT SUPPORT RODS INTO BUTTERFLY BRACKETS USING NOTCHES PROVIDED. LOOSEN NUTS AND SLIDE BRACKETS LEVEL TO SUPPORT STRUCTURE AND RE-TIGHTEN.
- 2). BEND BUTTERFLY BRACKETS INWARD TO TIGHTEN TO SUPPORT RODS.
- 3). FASTEN SUPPORT RODS TO SUPPORT STRUCTURE USING APPROPRIATE MOUNTING HARDWARE (PROVIDED BY OTHERS).
- 4). USE ALTERNATE RETROFIT INSTRUCTION SHEETS FOR FURTHER WIRE CHAMBER AND GIMBAL INSTRUCTIONS

FIXTURE IS SHIPPED WITH BUTTERFLY BRACKETS ATTACHED. IN APPLICATIONS WHERE BRACKETS ARE NOT REQUIRED, THEY CAN BE REMOVED.